


# Epson® MovieMate™ 25


## Quick Setup




# 1 *Unpack your MovieMate*

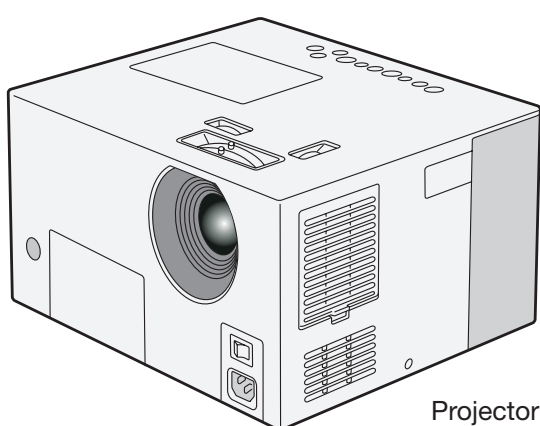


Projector

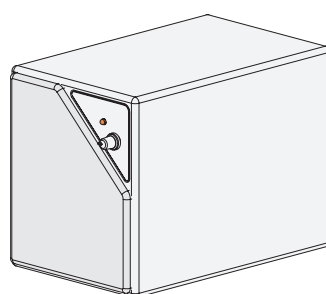


Subwoofer

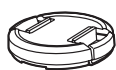


Lens cap

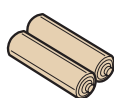


Batteries

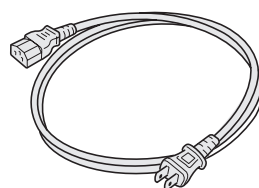


Power cord

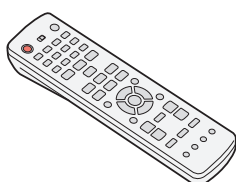

Remote control

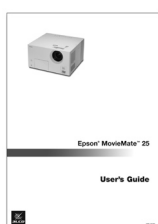

User's Guide



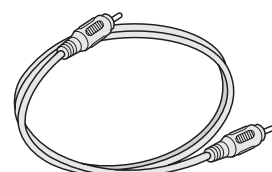


Subwoofer audio cable


## 2 Choose a location

You can use your MovieMate just about anywhere—in the living room, bedroom, or even outside. You can use it with the subwoofer and screen, or simply project on a wall and use the built-in audio system without the subwoofer.


The following pictures show three different setups.

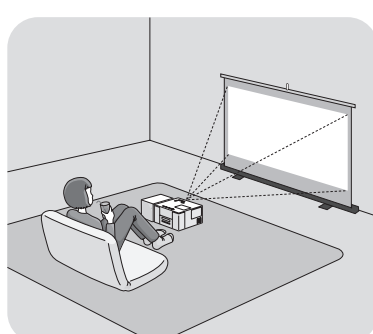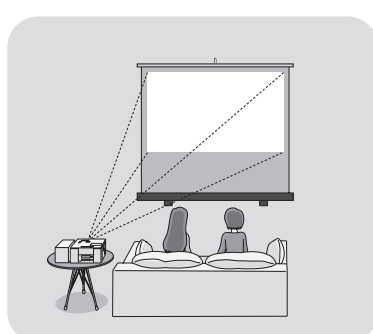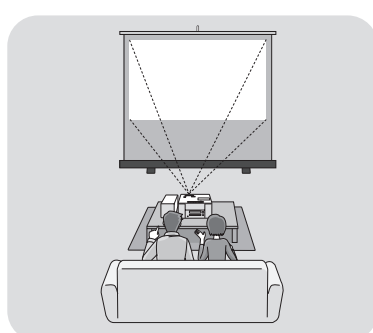

- If you want an image that fills the screen, place MovieMate about 6 1/2 feet away from it. The following diagram shows the approximate image size (measured diagonally) at various distances.

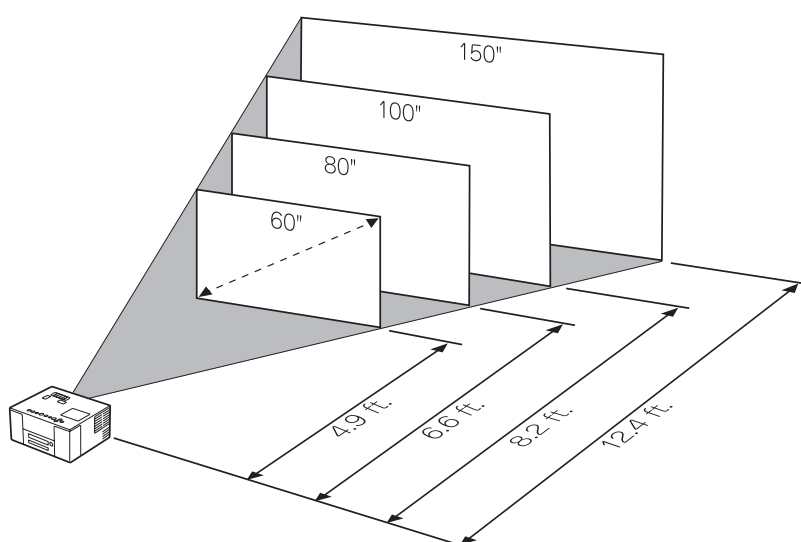


- MovieMate doesn't have to be directly in front of the screen, but it has to face straight ahead (at a 90-degree angle to the screen).

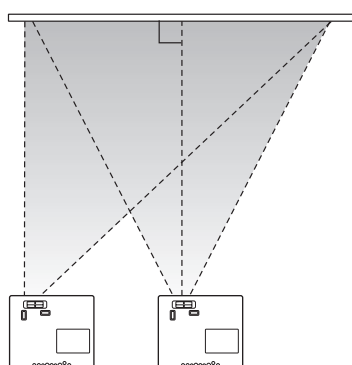


- If the image is too low, too high, or off to the side, you can use the lens shift dials to adjust the position. See section 5 on the back of this sheet.
- Make sure you have a grounded electrical outlet, power strip, or extension cord with two sockets available: one for MovieMate and one for the subwoofer.
- For the best sound, make sure the subwoofer faces toward you and away from the screen.

# 3 Set up MovieMate

- 1 If your MovieMate came with a screen, set it up following the instructions included in the screen box.
- 2 Put the batteries in the remote control.

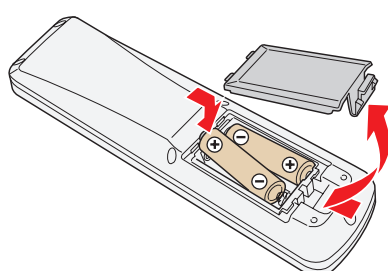


- 3 Connect the subwoofer. See the instructions included with the subwoofer for more information.

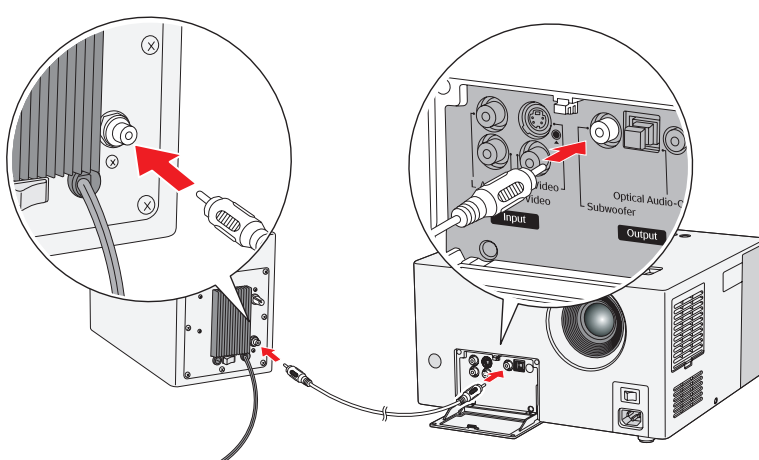


- 4 Plug in MovieMate and the subwoofer.

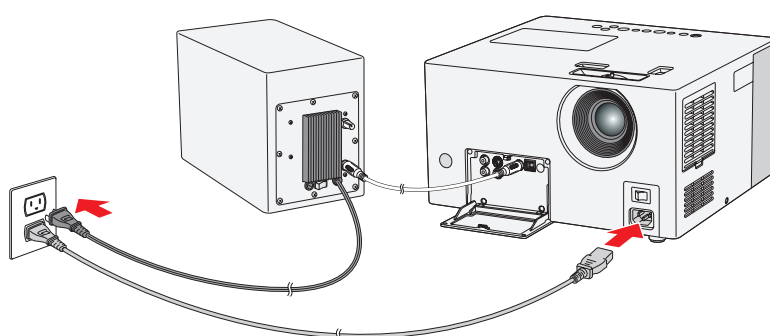


**NOTE** For best results, make sure the subwoofer faces toward you and away from the screen.

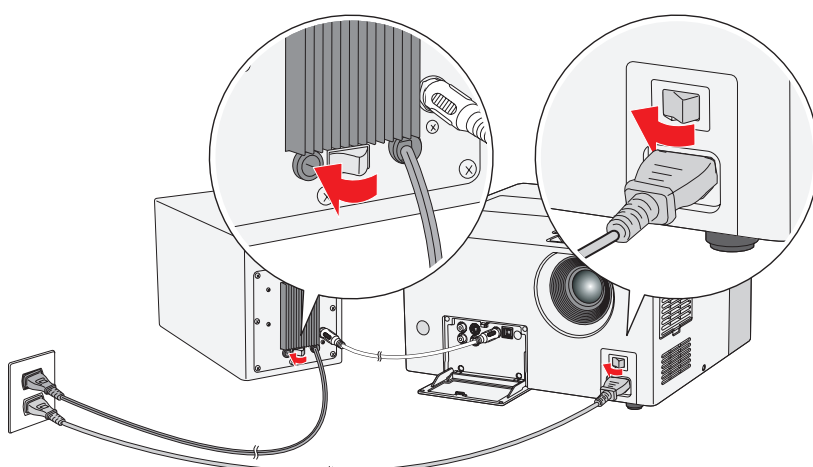


- 5 Turn on the power switches on MovieMate and the subwoofer.




# 4 *Start your movie*

- 1 Press the  button to open the DVD tray.
- 2 Insert the DVD and close the tray. If the movie doesn't start automatically, press the  **Power** button or the  **Image on/off** button.

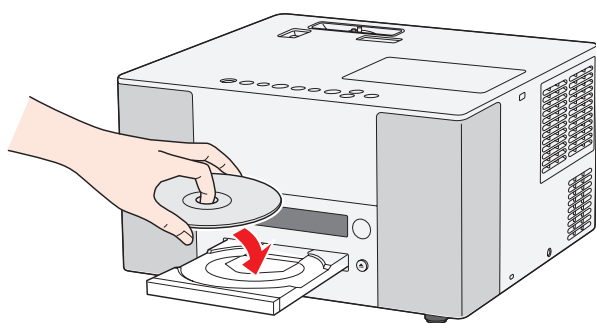


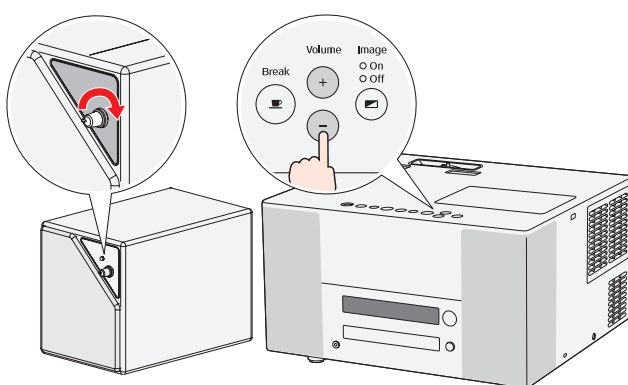

- 3 Adjust the volume if necessary.




# 5 *Adjust the image*

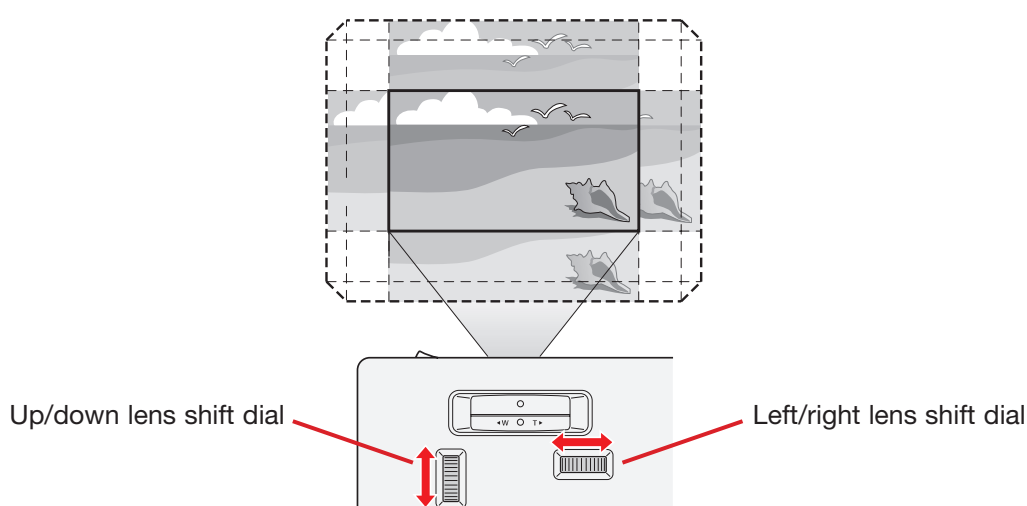- 1 If the image is too low, too high, or off to the side, use the lens shift dials to adjust its position.




If the picture looks like this  or this , MovieMate is not facing straight ahead. Make sure you position MovieMate at a 90-degree angle to the screen. You can then use the left/right lens shift dial to center the image.

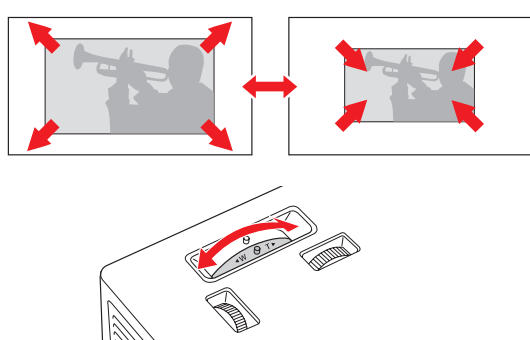


- 2 Use the zoom ring to adjust the size of the image.

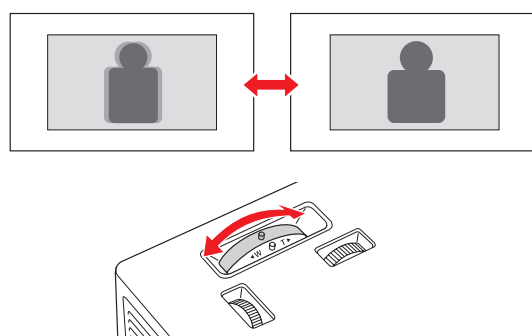


- 3** Use the focus ring to sharpen the image.




## ***When the movie is over . . .***

- 1** Press  to stop playing the DVD.
- 2** Press  to open the tray and remove the DVD. Close the tray.
- 3** Press the  **Power** button to turn off the lamp.
- 4** When you hear two beeps, turn off the MovieMate power switch. Turn off the power switch on the subwoofer and disconnect it from MovieMate.

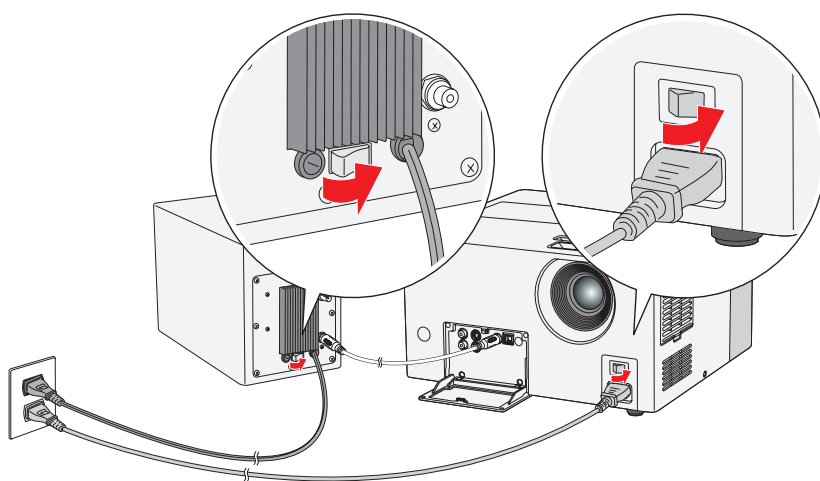

- 5** Attach the lens cover when you're not using MovieMate.

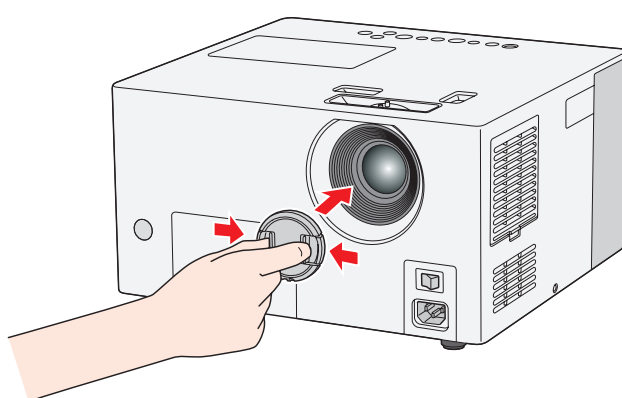


- 6** Unplug MovieMate and the subwoofer.

# Any problems?

If you don't find the solution to your problem here, see your *MovieMate 25 User's Guide* for more troubleshooting tips.

## No picture appears on the screen

- Make sure MovieMate is turned on and warmed up. Turn on the main power switch on the front and then press the  **Power** button.
- Make sure the lens cover is off.
- The image may be off the screen. Use the up/down and left/right lens shift dials to adjust its position. See section 5 at the left.
- Make sure MovieMate is not tilted. Tilting it more than 5 degrees up or down may cause problems. Use the up/down lens shift dial to adjust the image position.

## The picture is blurry or out of focus

- Adjust the focus using the focus ring. See section 5 at the left.
- Make sure the lens cover is off.
- Make sure MovieMate is placed the correct distance from the screen: no closer than 2.4 feet and no farther than 37 feet.

## The picture is taller on the left or right side

Make sure MovieMate is level and facing straight ahead, at a 90-degree angle to the screen.

## The remote control doesn't work

- Make sure the toggle switch is in the correct position: set to **-123** to use the numeric buttons, or to **Func.-** to use the other functions of these buttons.
- Check the batteries.

# Any questions?

Look here for answers:

## MovieMate 25 *User's Guide*

Instructions for all MovieMate features, including how to connect your game console, camcorder, satellite TV, or cable TV system.

## Telephone Support Services

To use the Epson PrivateLine® Support service, call (800) 637-7661 and enter the PIN on the Epson PrivateLine Support card that came with your MovieMate. This is the fastest way of speaking to a live representative, and it's free. This service is available 6 AM to 6 PM, Pacific Time, Monday through Friday, for the duration of your warranty period.

You can also speak with a projector support specialist by dialing one of these numbers:

**U.S.:** (562) 276-4394, 6 AM to 6 PM, Pacific Time,  
Monday through Friday

**Canada:** (905) 709-3839, 6 AM to 6 PM, Pacific Time,  
Monday through Friday

**Support for the subwoofer:** Contact Aura™ Sound at (562) 447-1780

Toll or long distance charges may apply.

## Electronic Support Services

Epson provides technical assistance through electronic support services 24 hours a day at <http://support.epson.com>.

Epson is a registered trademark of Seiko Epson Corporation. MovieMate is a trademark and PrivateLine is a registered trademark of Epson America, Inc.

General notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.